



BIRTHSTONE COLOR

Resin Stone Twin Necklace


< Material /Tool >

Green Tourmaline and white Jewel Color colorants are used in this how to guide.



Products' information based on April, 2024.

- STAR DROP HARD UV-LED RESIN
- TAFRECT MOLD <MINERAL_A>
- JEWEL COLOR <any color you like>
- MIXING STICK
- STIR STICK
- MIXING PALETTE <S>
- SHADING CASE
- UV-LED LAMP
- HANDY HEATER
- HOLE MAKER (B 8mm CUT TINNY STICK)
- NECK CHAIN • WIRE
- TWEEZERS • ROUND NOSE PLIERS
- FLAT NOSE PLIERS • SAND PAPER • SWAB

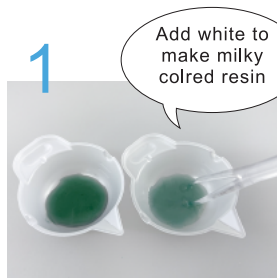

Prepare two colored resin. Pour resin in two palettes and put drops of color you like into each resin. Stir colored resins well with a stir stick.



Use a handy heater to remove air bubbles.




Place one palette in a shading case to avoid exposure to light.



Hold an 8mm-cut stick with tweezers and dip both tips of the stick a bit into the colored resin.




Set the stick with resin and float it on the inside top of the tafrect mold_mineral B.

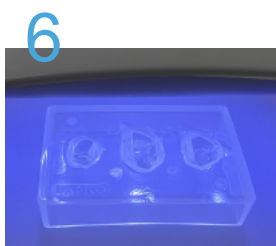


Fix the stick by placing the mold under the light.




Scoop the resin and place it into the mold with a mixing stick. Be careful not to take the fixed stick off by hitting it..

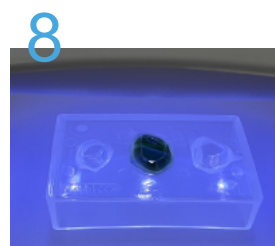


Cure it under the UV-LED light.

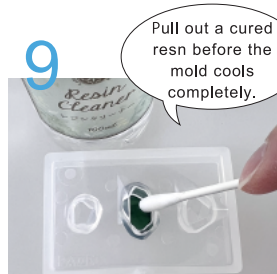

Cool the mold down, soak the cleaner in, rub the mold from the back, then pull the stone out.
※ The key to long-lasting mold.

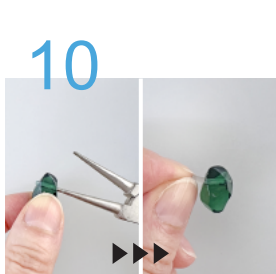

Push the stick from both sides using a round nose pliers. Once the stick moves and comes out, pull it out by hands.

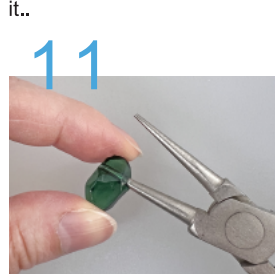

Put a plier in the hole and turn it to the left or right to widen the hole. Scrape off burrs. Repeat the process from step 4 for other stone.



Take off the C-ring on one side of the necklace, insert the wire and put the stones through the wire.